



HEADING	
Title:	CoastKey Evinrude G2 Installation
Doc. Nr:	NWS021-27
Author:	Pål Sørensen
Issue date:	16-04-2020

HISTORY				
Issue number	Date	Version	Owner	Approved by
1	16-04-2020	A	Pål Sørensen	
2				
3				

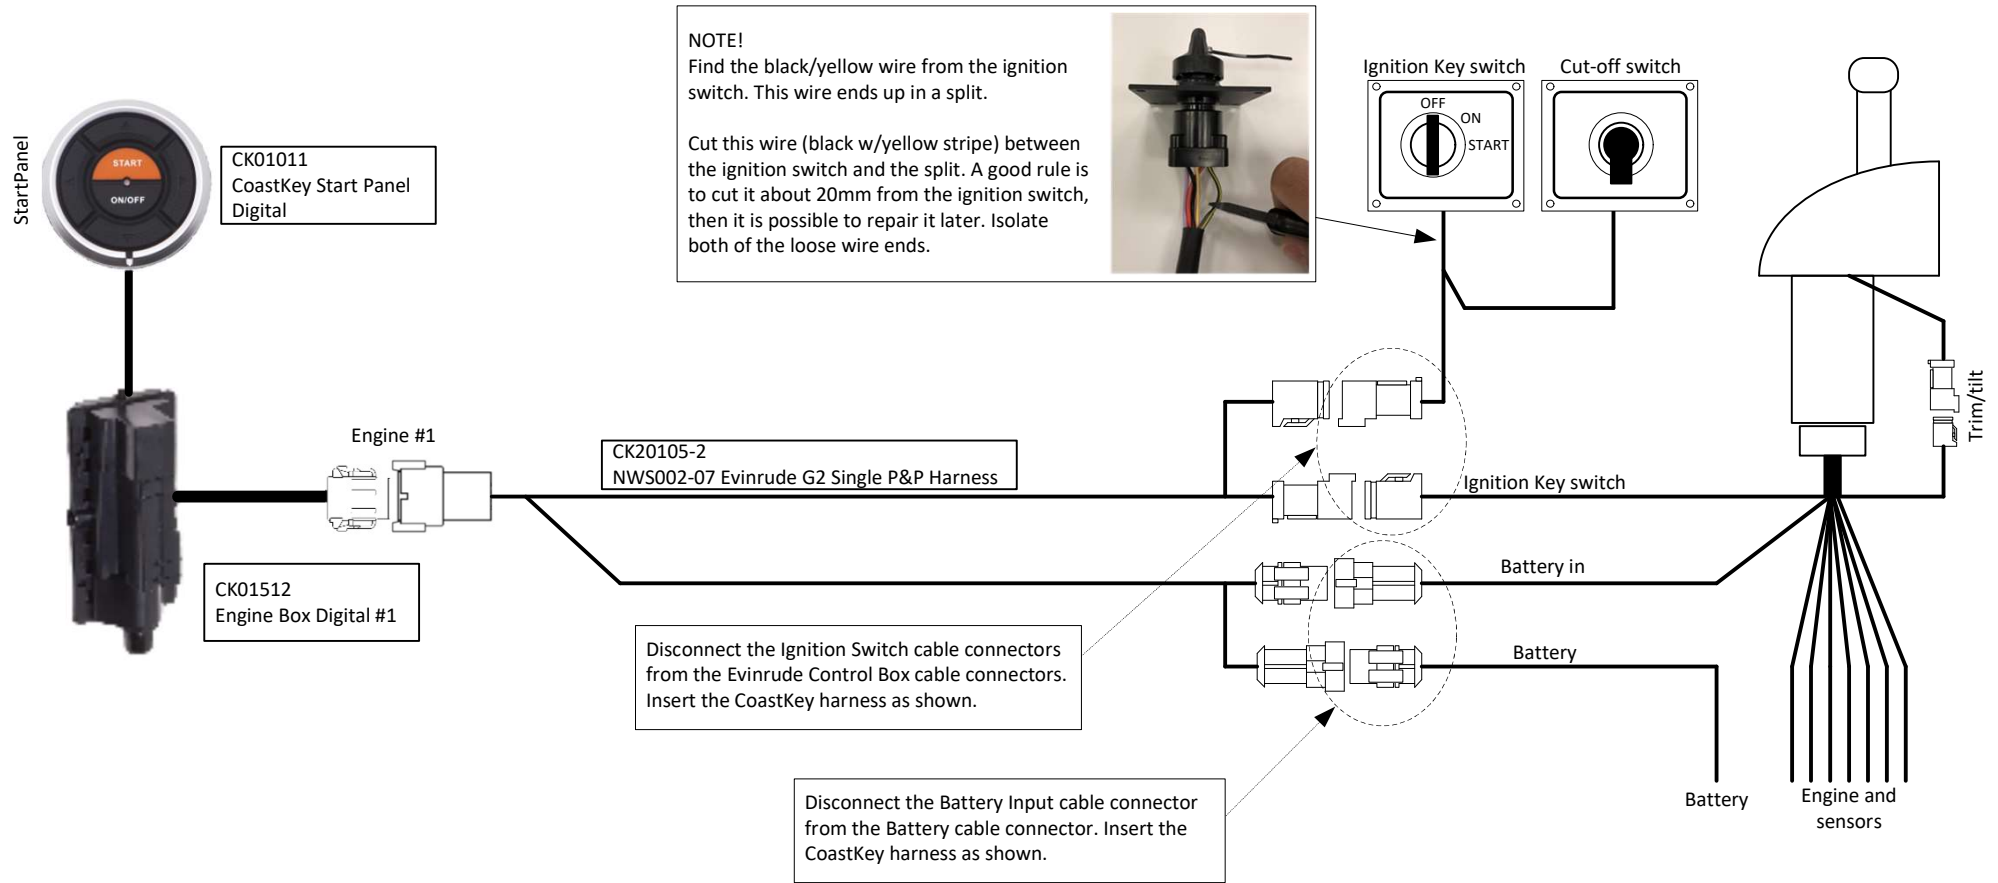

Date	Drawn by	Scale
16-04-2020	Pål Sørensen	-
Item name		
CoastKey Evinrude G2 Installation Single – CoastKey Basic and Standard		
Item number		Rev.
NWS021-27		A

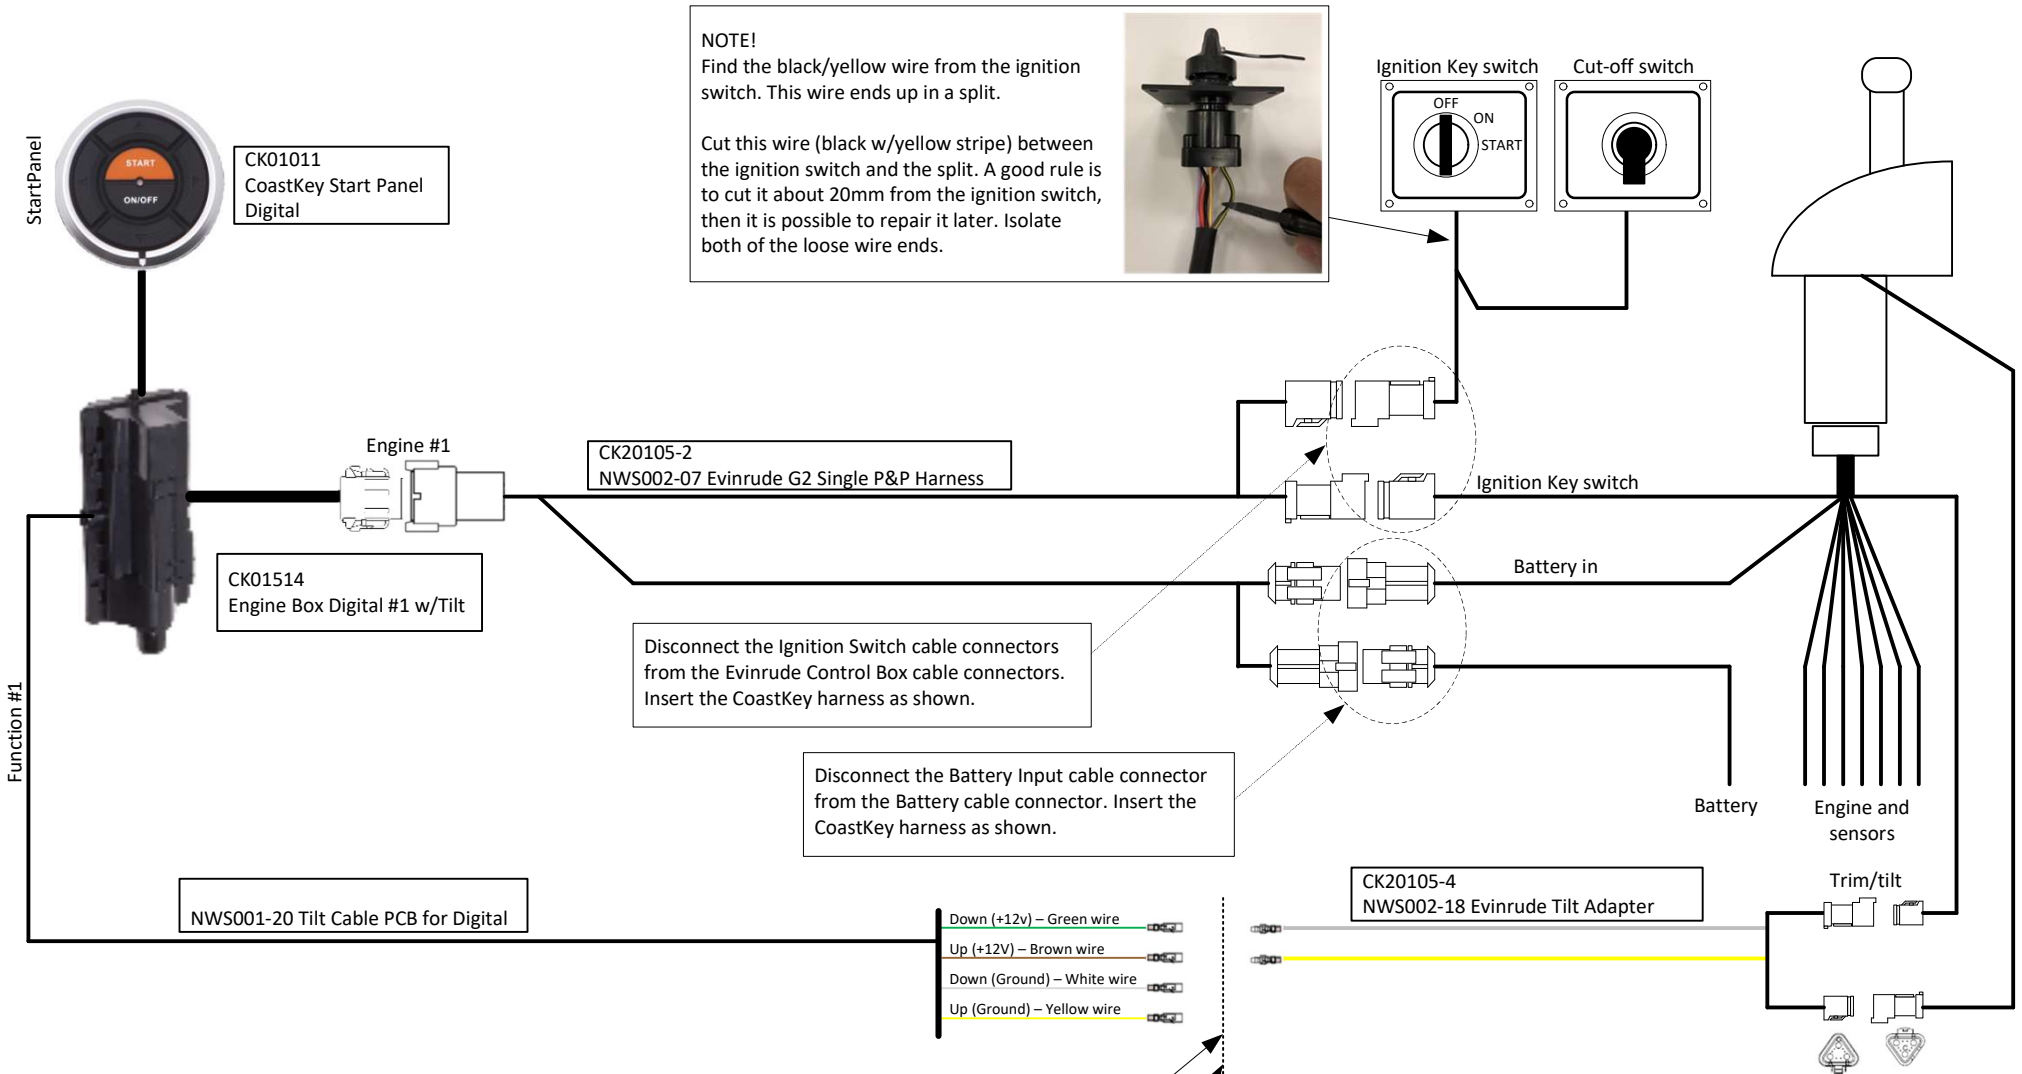


NOTE!
 Find the black/yellow wire from the ignition switch. This wire ends up in a split.

Cut this wire (black w/yellow stripe) between the ignition switch and the split. A good rule is to cut it about 20mm from the ignition switch, then it is possible to repair it later. Isolate both of the loose wire ends.



Disconnect the Ignition Switch cable connectors from the Evinrude Control Box cable connectors. Insert the CoastKey harness as shown.

Disconnect the Battery Input cable connector from the Battery cable connector. Insert the CoastKey harness as shown.

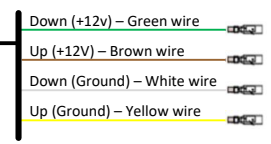

CK01020
CoastKey FOB5

TRIM/TILT Connection Options:

Standard Remote Control – Black without LEDs

CK Function harness	NWS002-18 Tilt Adapter	Evinrude G2 Trim/Tilt cable
Brown – UP (+12V signal)	Yellow – Tilt UP	Blue – Tilt UP
Green – DOWN (+12V signal)	White – Tilt DOWN	Green – Tilt DOWN


Premium Remote Control – Gray/Chrome w/LED's

CK Function harness	NWS002-18 Tilt Adapter	Evinrude G2 Trim/Tilt cable
Yellow – UP (Ground signal)	Yellow – Tilt UP	Blue – Tilt UP
White – DOWN (Ground signal)	White – Tilt DOWN	Green – Tilt DOWN

Date	Drawn by	Scale
16-04-2020	Pål Sørensen	-
Item name		
CoastKey Evinrude G2 Installation Single - CoastKey Premium		
Item number		Rev.
NWS021-27		A

NOTE!
Find the black/yellow wire from the ignition switch. This wire ends up in a split.

Cut this wire (black w/yellow stripe) between the ignition switch and the split. A good rule is to cut it about 20mm from the ignition switch, then it is possible to repair it later. Isolate both of the loose wire ends.

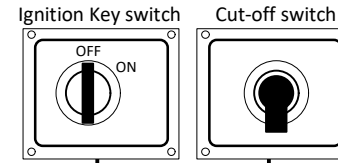



CK01011
CoastKey Start Panel
Digital

Disconnect the Ignition Switch cable connector from the Evinrude Control Box cable connector. Insert the CoastKey harness as shown.


Disconnect the Evinrude start panel cable connector from the Evinrude Control Box cable connector. Insert the CoastKey harness as shown.

CK20105-3
NWS002-08 Evinrude G2 Twin P&P Harness

CK01513
Engine Box Digital #1+2




Disconnect the Battery Input cable connector from the Battery cable connector. Insert the CoastKey harness as shown.

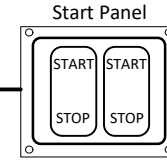


Start panel

Battery in

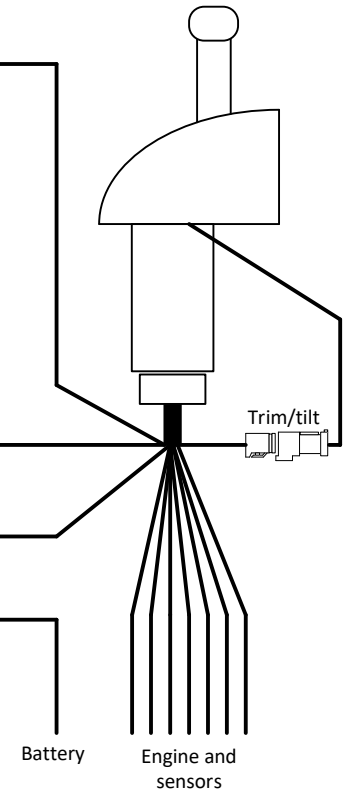

Date	Drawn by	Scale
16-04-2020	Pål Sørensen	-
Item name		
CoastKey Evinrude G2 Installation Twin – CoastKey Basic and Standard		
Item number		Rev.
NWS021-27		A

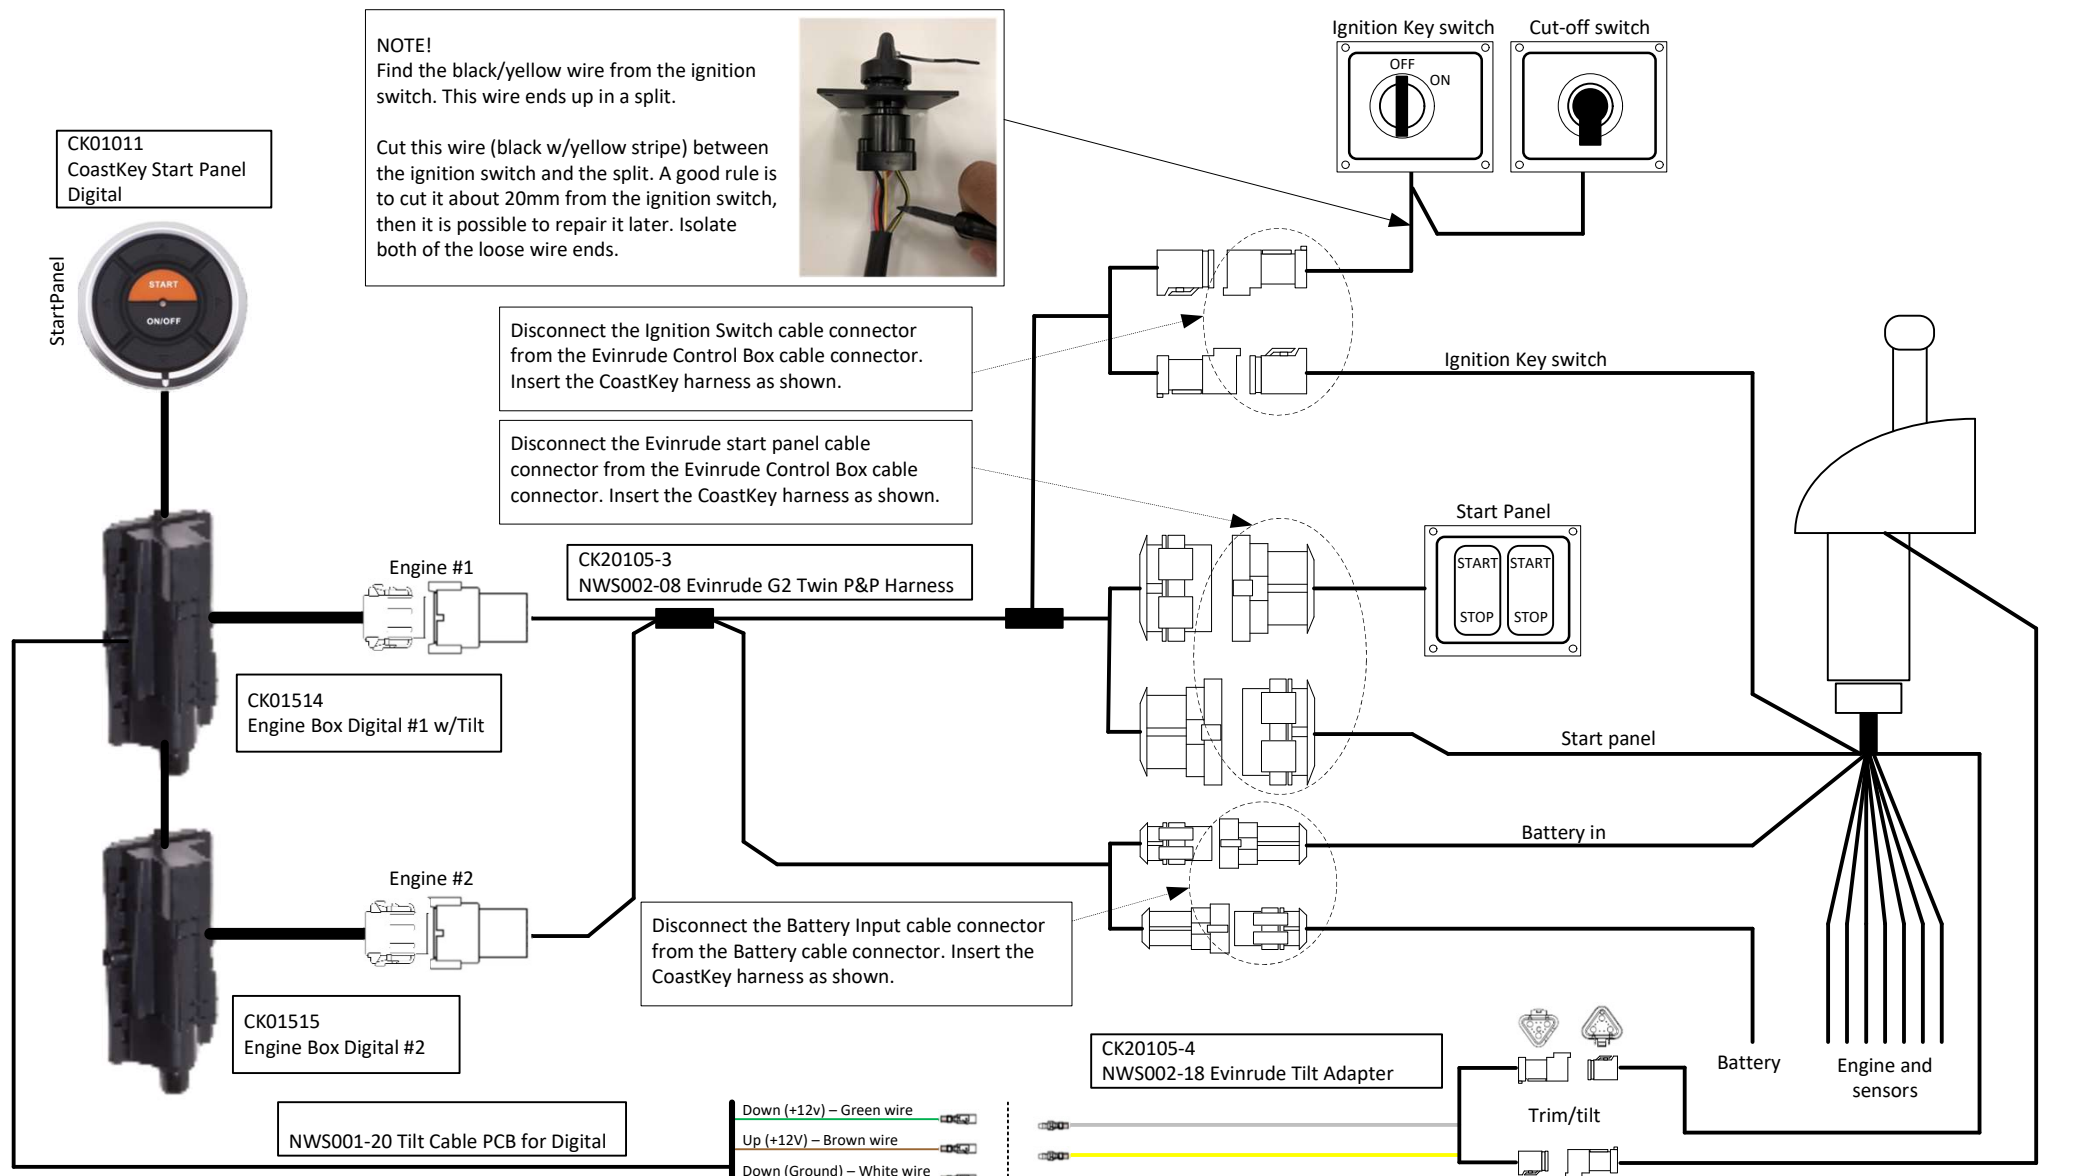

TRIM/TILT Connection Options:

Standard Remote Control – Black without LEDs

CK Function harness	NWS002-18 Tilt Adapter	Evinrude G2 Trim/Tilt cable
Brown – UP (+12V signal)	Yellow – Tilt UP	Blue – Tilt UP
Green – DOWN (+12V signal)	White – Tilt DOWN	Green – Tilt DOWN

Premium Remote Control – Gray/Chrome w/LED's

CK Function harness	NWS002-18 Tilt Adapter	Evinrude G2 Trim/Tilt cable
Yellow – UP (Ground signal)	Yellow – Tilt UP	Blue – Tilt UP
White – DOWN (Ground signal)	White – Tilt DOWN	Green – Tilt DOWN

CK01020
CoastKey FOB5



Date	Drawn by	Scale
16-04-2020	Pål Sørensen	-
Item name		
CoastKey Evinrude G2 Installation Twin – CoastKey Premium		
Item number		Rev.
NWS021-27		A